

## DI Water Tank Pressure Regulator



Lock nut

Pressure adjustment knob

Steps to adjust outlet pressure (tank pressure)

1. Turn lock nut counter-clockwise to loosen
2. Turn pressure adjustment knob clockwise to increase tank pressure to desired value (recommended: 3-4 bar / 45-60 PSI)
3. Re-set lock nut by turning clockwise. Lock-nut prevents unintended increase in pressure